


TRANSFLEET

Flexbow[®] Tarp Bow For The Next Millenium

Flexbow Installation

- 1.0 We recommend welding the aluminium bow holders to the side of trailers. They may also be bolted, machined face of holder must be vertical when installed.
- 2.0 Cut Flexbows on the same axis 25 degrees from vertical, on the same angle as the bow holder , 50mm longer than the inside of the trailers, this will net a 250 to 300mm arch, refer to the below diagram;

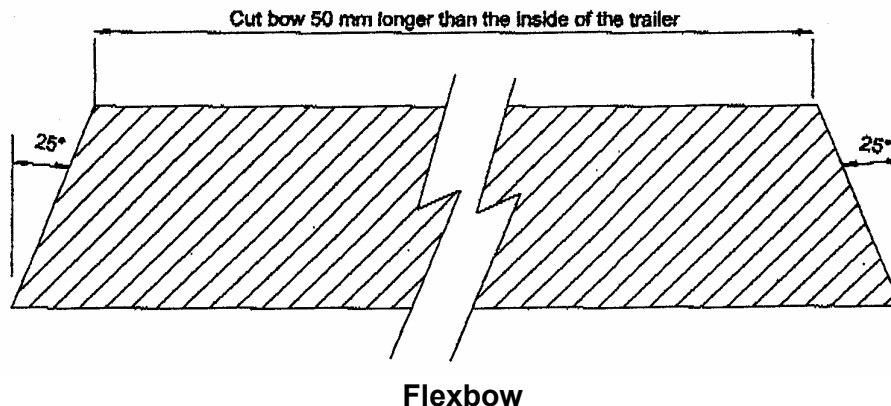

Measurement is made on the short side of the Flexbow

Example: If the trailer is 2300mm inside to inside cut the bow 2350mm at 25 degrees angle, measure on the short side of the cut. Measure each position separately.

- 3.0 Insert one end of the Flexbow in to the bow holder arched to the trailer. Plece bow holder on end of bow and pull down into place on the other side of the traiker and weld into place.
- 4.0 Flexbow must have arch to function correctly.

Remember CUT LONG!!! You can always cut again.



Contact: Matthew Gillies

15 Mana Place, Manukau City, PO Box 76065, Auckland New Zealand.

Telephone: 0-9-262 3176 Fax: 0-9-262 3267

Email: mattgillies@transfleet.co.nz